


# BV03 系列电动球阀安装说明


## BV03 Series Ball Valve Installation Manual

### 阀体的安装 Valve Body Installation

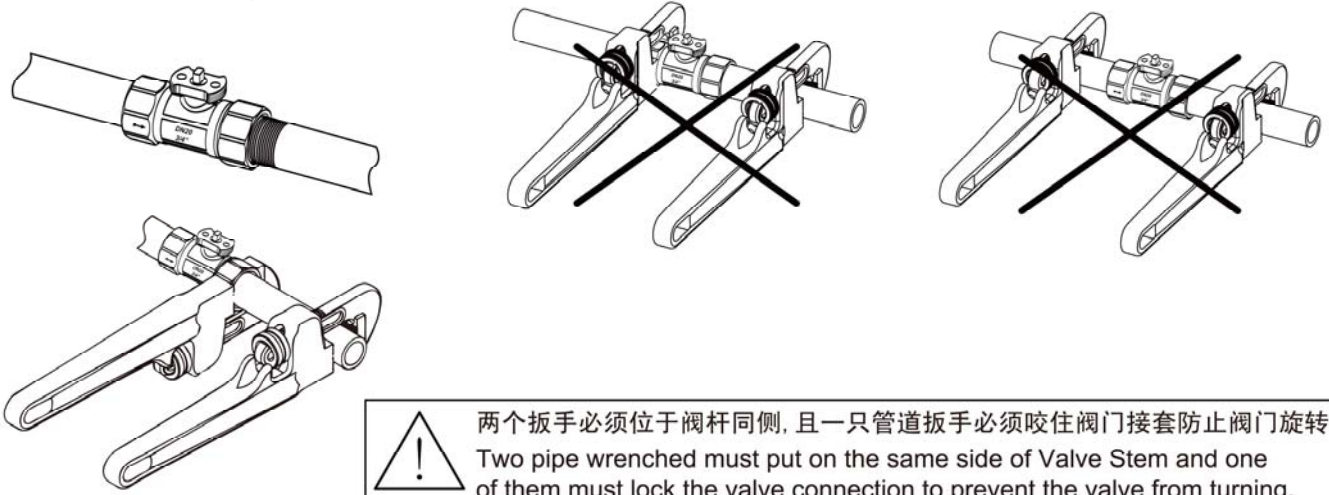


### 执行器安装

#### Actuator Installation

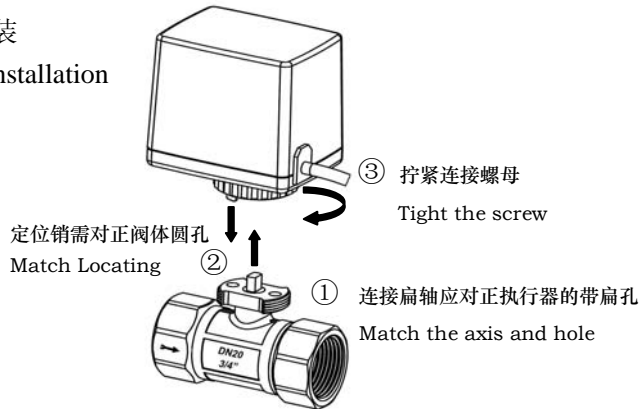



### 执行器拆卸

#### Actuator Dismantlement

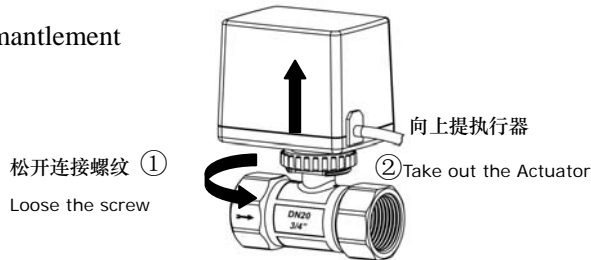


可用扳手操作, 开启或关闭阀门

 Use wrench to open or close the valve

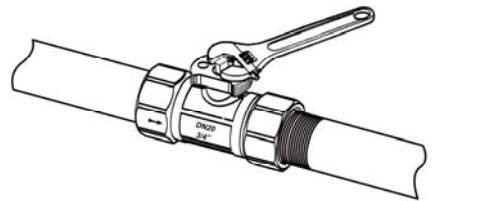


将阀杆旋转至与阀体垂直为关闭  
The vertical stem means valve close

将阀杆旋转至与阀体水平为开启  
The horizontal stem means valve open

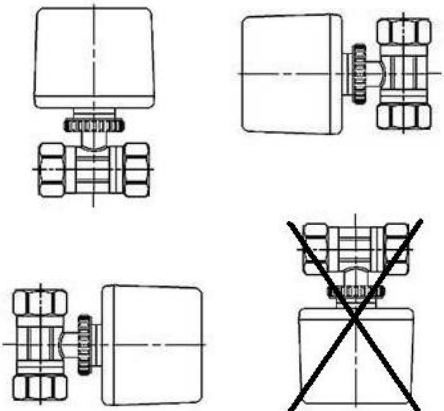

### 开关型 ON/OFF

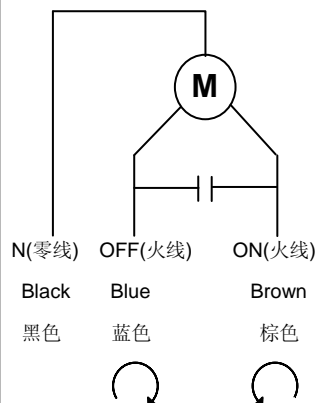

温控器与执行器只可以一对一进行控制, 否则执行器将损坏  
One thermostat can only control one valve actuator, otherwise it will damage the actuator

**HaiLin**  
Controls